


Hazel Airbag Vest

How to replace the CO2 cartridge

Once your Hazel Airbag Vest has been triggered, it needs a fresh CO2 cartridge before it's ready to protect you again. Here's how to do it in a few simple steps.

Before you start: check the label on your replacement cartridge and confirm it matches the volume required for your vest size (50cc for XXS–S, 60cc for M–XL, 85cc for XXL). Using the wrong size cartridge can affect how the vest deploys.


STEP BY STEP

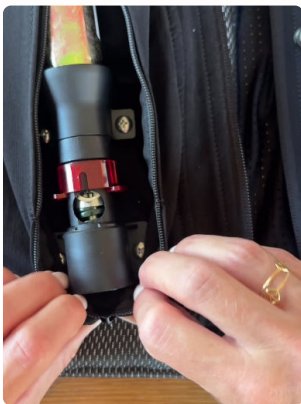

1

Open the cartridge compartment

Unzip the compartment at the back of the vest to access the trigger mechanism. You'll see the used cartridge still attached inside.

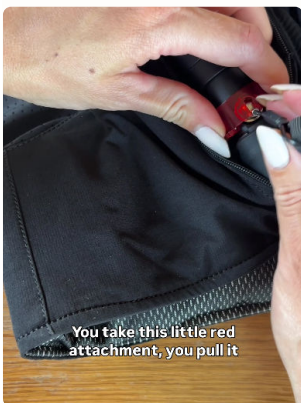

2

Release the pin


Find the small red pull-tab on the trigger mechanism and pull it to release the pin from its locked position.



3

Turn the pin to disengage it

Turn the pin in the opposite direction to fully release it from the mechanism, so the used cartridge can be removed.

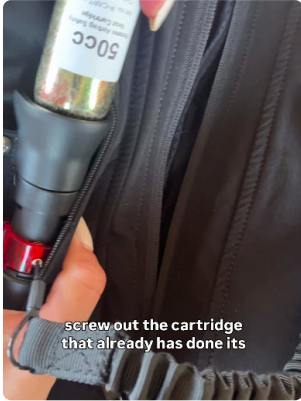

4

Unscrew the used cartridge

Using the vest's tool, unscrew the cartridge that has already deployed by turning it counter-clockwise until it comes free.



5

Insert the new cartridge straight

Take your new cartridge and check the label for the correct size. Line it up carefully, making sure it sits straight before screwing it in.



6

Screw it in tightly, clockwise

Turn the new cartridge clockwise until it's fully secured. Re-insert the pin, close the compartment, and your vest is re-armed and ready to ride.